


## STEPS

## Display Easel



## STEP 01

Open easel, rotate screws on feet to adjust to your desired height & tighten it.

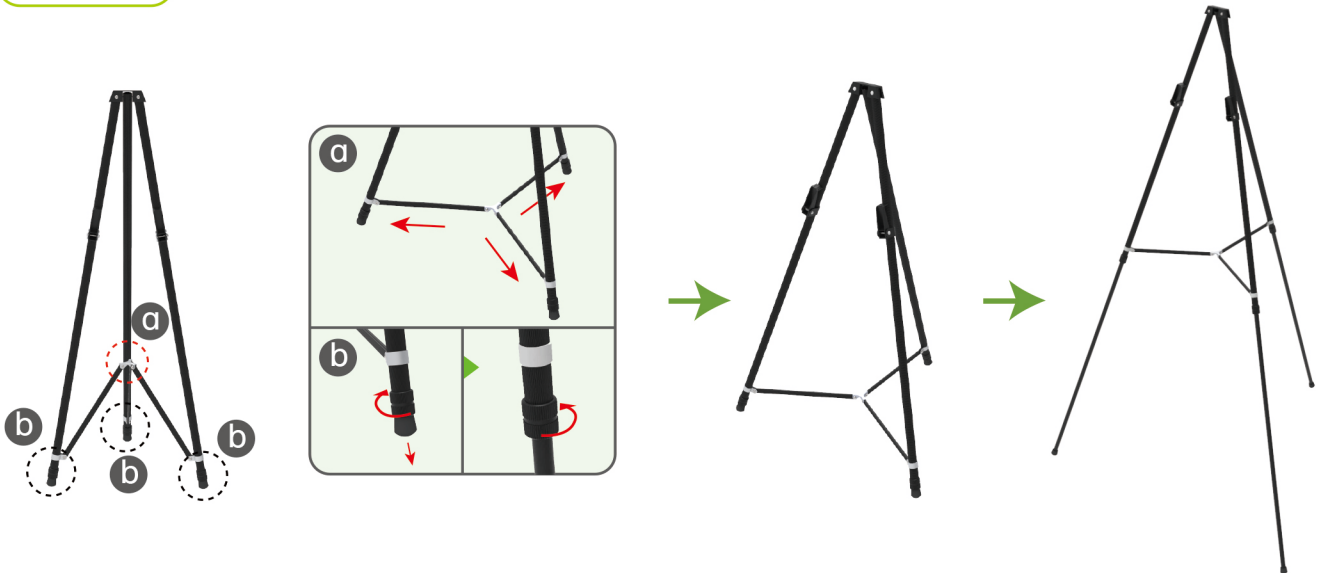

## STEP 02

Adjust buckle brackets up & down to your desired height, pull them outward to place custom poster/sign/art/photo print.

